





## TIOGA KNOCK DOWN DOOR AND FRAME INSTALLATION



1. Determine swing then assemble frame. Fasten head jambs using bolts and locking nuts as supplied with frame (A).
2. Tilt entire assembly into opening. Secure hinge base anchor into flooring material. Plumb hinge and strike jambs and level header. Anchor header and secure strike base anchor (B).
3. Attach jamb anchor to top girt (jamb extension may be needed to accommodate higher girt height).
4. Secure entire frame to the wall panel.
5. Install threshold.
6. Install door panel into the frame with hinges provided in the frame kit. Check clearance of door panel around entire frame assembly. Reveal should be 1/8".
7. Install lock as provided. Install kerf weather strip starting with the header. Clip excess weather strip. Be sure weather strip on the jambs reaches the threshold to ensure a complete seal.
8. Install door sweep to the outside of the door panel. Cut excess aluminum from sweep as needed. Do not cut the rubber seal. Ensure sweep reaches and seals to the threshold and the rubber seal fits across the entire door and reveal. Cut excess seal as needed.
9. Install any additional hardware.

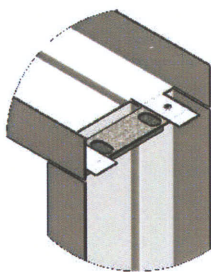

DETAIL A  
SCALE 1 : 8

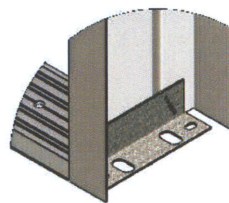

DETAIL B  
SCALE 1 : 8

### PROPRIETARY AND CONFIDENTIAL

THIS INFORMATION IS THE SOLE PROPERTY OF TELL DOORS & WINDOWS, LLC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF TELL DOORS & WINDOWS, LLC. IS PROHIBITED.